Beamline 5.4 (IR) EPS dwg.

Rev 02 J Mentz 7/13/12
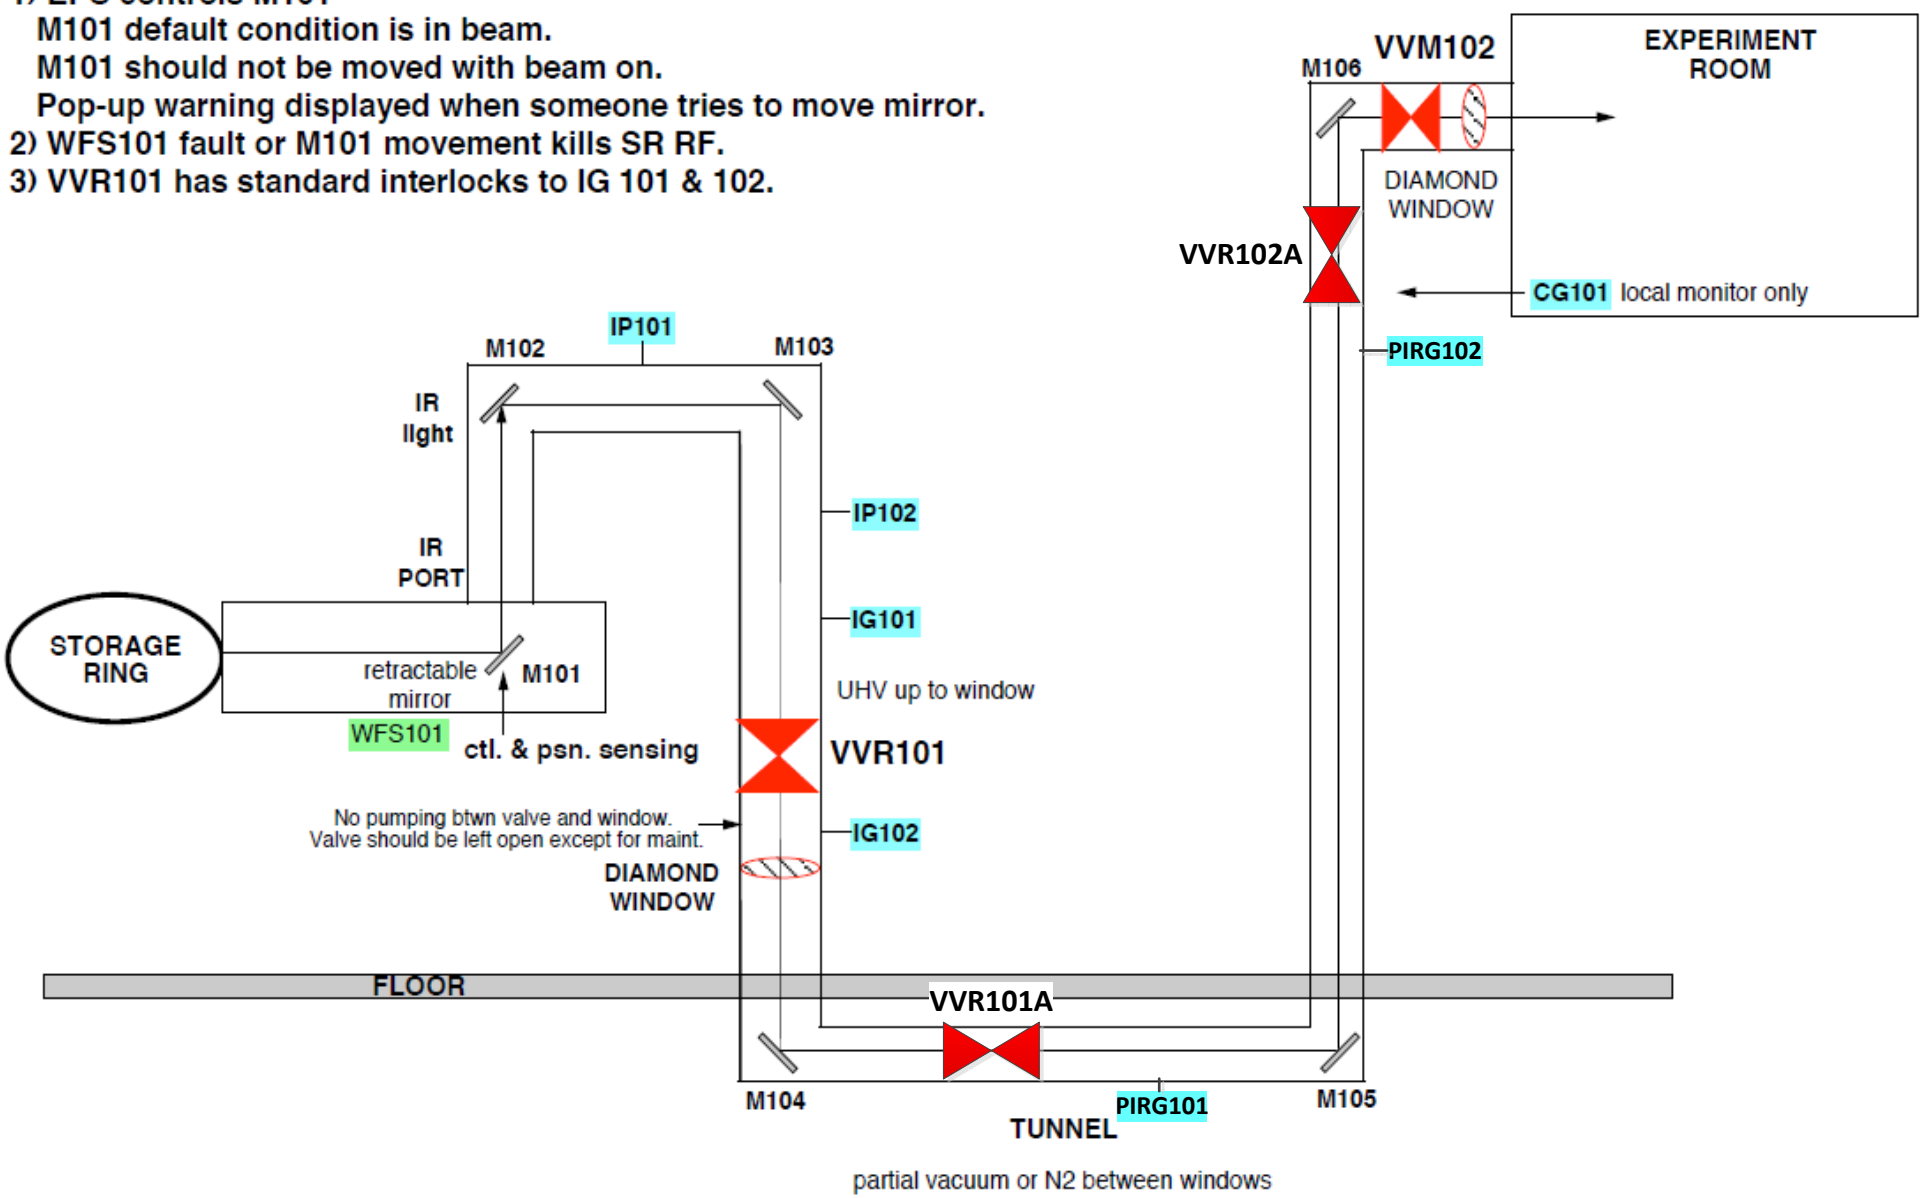
NOTES: ALL FAULTS LATCH IN FE EPS; KEY ACCESS
EPS will be part of front-end; no separate branchline EPS
1) EPS controls M101
M101 default condition is in beam.
M101 should not be moved with beam on.
Pop-up warning displayed when someone tries to move mirror.
2) WFS101 fault or M101 movement kills SR RF.
3) VVR101 has standard interlocks to IG 101 & 102.